
DW-8721

Install Specification

- 1. Switch off the source before installing.
- 2. Pls use glove before installing.
- 3. Pls take off the protective coating Before install the cristal.
- 4. Can be used clear water to scrub the crystal before installing.
- 5. Switch off the source before cleaning the lamp.

Please follow the installation diagram!

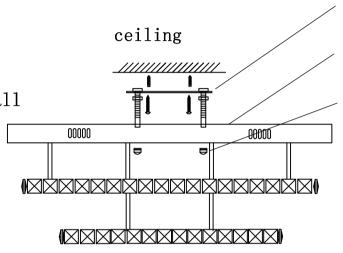

Hanging strip

Stainless steel chassis

Nut

